Veloce

MILK FROTHER

INSTRUCTIONAL MANUAL

MMF-009

General Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label and your outlet socket is earthed.
- **WARNING!** To protect against fire, electrocution and electric shock, do not immerse the cord, plug or the appliance itself in water or other liquid, or expose the electrical connections to water. Do not operate this product with wet hands or spill liquids into the product.
- Do not use this appliance with an extension cord.
- Run the power cord in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- Protect the power cord. Do not kink, bend, squash, strain or damage the cord; protect it from sharp edges and heat; do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Unwind the power cord completely for use.
- Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged, or after it malfunctions or has been damaged in any manner.
- Do not insert any objects and/or fingers in the appliance apertures.
- If the supply cord is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- In case of damage, contact our after sales support line to arrange return or repair of the damaged product.
- Make sure to unplug the appliance after each use, when the appliance is not in use and before cleaning the appliance.
- Do not pull on the cord to disconnect the plug from the power supply. Switch off the power at the outlet and then gently pull on the plug only to unplug it.

After Sales Support
Telephone (Aus): 1300 886 649
Telephone (Nz): 0800 836 761

General Safety Instructions (Cont.)

Usage conditions and restrictions

- This appliance is intended for indoor household use only. It is neither suitable for commercial/industrial nor for outdoor use.
- Do not use the appliance for anything other than its intended purpose: frothing and/or heating milk.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the appliance.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock and/or personal injury.
- Improper installation may result in the risk of fire, electric shock and/or personal injury. We accept no liability for any damage due to improper use or incorrect handling.
- Never operate the appliance on an uneven surface.
- Do not place the appliance on a polished wood surface, it could damage the wood.
- Do not operate the milk frother without milk in the jug.
- Only use the milk frother with the power base provided.
- Do not use the power base with anything else but the milk frother.
- Do not overfill the jug. Filling past the maximum levels indicated inside the jug can cause overflowing during operation.
- Never touch rotating parts. Risk of injury!
- **WARNING!** Never leave the appliance unattended during use; switch it off and unplug it.

Parts List

1 Transparent lid
2 Silicon ring (part of the lid)
3 Housing (with non-stick coating inside)
4 Handle
5 Frothing and heating
6 Indicator light
7 Frothing
8 Whisk for frothing milk (stored at the inside of the lid)
9 Whisk for heating milk (stored inside the jug)

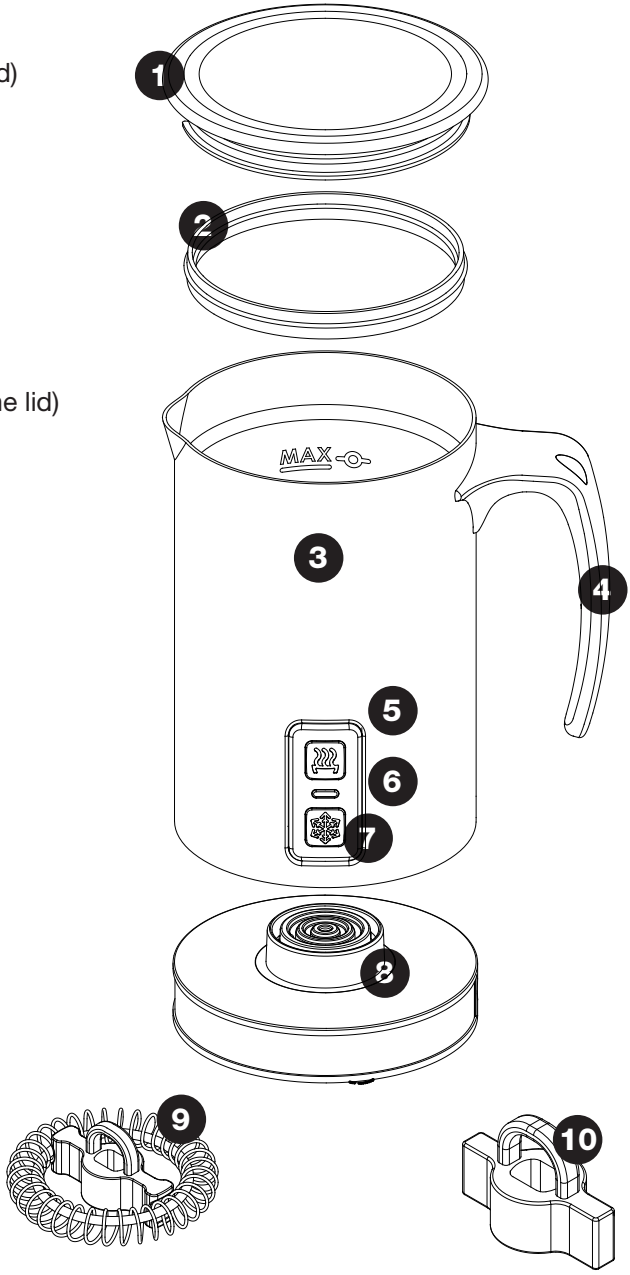

After Sales Support
Telephone (Aus): 1300 886 649
Telephone (Nz): 0800 836 761

Getting Started

Before first use

- Unpack the box with care, keeping all packaging materials until you are satisfied everything is present and in working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Inspect the cord and plug for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly.
- Clean the jug and the accessories as described under the “Cleaning and care”, page 11, to remove any dust or residues from the manufacturing process.

Assembly

Your new milk frother comes with two whisks, one for frothing and one for heating milk.

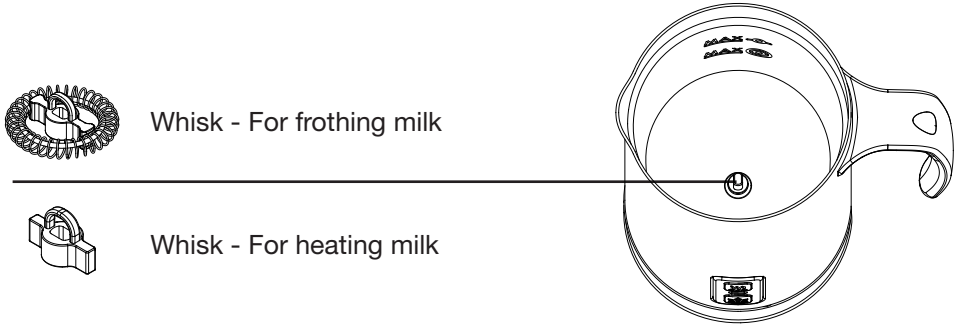

- The whisk for frothing milk is stored at the inside of the lid and consists of a plastic whisk with a metal spiral ring around it.
- The whisk for heating milk is stored inside the jug and consists of a slightly smaller plastic whisk.

Use the milk frother with one of these whisks for heating and/or frothing milk, according to the instructions on the following pages.

Instructions

Whisk	Function	Max. capacity	Time (sec.)
	Frothing Only	115ml	65
	Frothing and Heating	115ml	60-90
	Heating Only (a small amount of froth)	240ml	130-140

1. Choose the appropriate whisk and set it inside the jug (see "Assembly", page 8).
2. Pour milk into the jug, making sure not to exceed the maximum level marked on the inside of the jug. (The lower MIN/MAX markings are for frothing milk, the top marking is the maximum level for heating milk.)
3. Put the lid on top of the frother, making sure it is tightly closed.
4. (a) **Frothing and Heating / Heating Only**
   Press the frothing/heating button: both the blue and the red indicator lights will come on at the same time. When the milk is frothed and/or heated, the blue light will go off and the red light will flash for 30 seconds, indicating the milk is ready.

   (b) **Frothing Only**
   Press and hold the frothing button for 1 - 2 seconds: the blue indicator light will come on. It will stay illuminated for approximately 65 seconds, when it will go off and the red indicator light will flash for 30 seconds, indicating frothing has finished.

   NOTE: A flashing blue indicator light indicates that the machine is working at an overload. Switch off the milk frother immediately and pour out some milk. Then try again, making sure the milk inside the jug is below the marked maximum level.
5. After frothing or heating, allow 2 minutes for the thermostat to reset before reusing the frother. To shorten this time, rinse with water and wipe dry after each use.

After Sales Support
Telephone (Aus): 1300 886 649
Telephone (Nz): 0800 836 761

Instructions (Cont.)

Hints and tips

Below are some handy hints to help you get the best out of your milk frother.

- Always froth or heat your milk first when preparing a hot drink. While it is operating, prepare your coffee or hot chocolate and serve immediately.
- You can froth cold milk with this frother without heating it, but you cannot cool down milk in the frother. Without the heating function, the frother will maintain the milk's temperature.
- Milk heats to approximately 70°C in the milk frother. This is the ideal temperature to ensure the flavour of your coffee is not impaired and you can start sipping on your drink without having to wait for too long for it to cool down.
- Keep the whisks in a safe place, out of reach of young children. They are small and can easily be lost.
- The frother is designed to heat and froth milk. If you add flavourings, coffee granules or hot chocolate powder in the frother, ensure you thoroughly clean all parts immediately after use.

Serving suggestions

The table below lists a selection of quick and easy drinks made using the milk frother.

Frothed milk	Cappuccino	1/3 espresso Add 2/3 frothed milk. Top with cocoa powder.
	Latte Macchiato	Pour frothed milk in a tall glass. Add espresso slowly along the rim of the glass.
	Instant frothy coffee	Make instant coffee. Add frothed milk.
Hot milk	Caffè Latte	1/3 espresso Add 2/3 heated milk and stir.
	Hot Chocolate	Pour heated milk into a large mug. Add chocolate powder and stir to mix.
	Instant milky coffee	Place instant coffee granules in a cup. Add hot milk and stir to mix.

Other Useful Information

Cleaning and care

Always remove the jug from the power base before cleaning.

Never immerse the jug or the base into water.

1. **The jug:** Clean immediately after each use. Flush and clean the walls using warm, soapy water and a non-abrasive cloth. Then dry with a soft cloth.
2. **The lid:** Separate the silicon ring from the lid before washing/rinsing both pieces with water. Reassemble the ring into the lid before reuse or storage.
3. **The body:** Clean with a soft cloth only.

   Important: Never use sharp cleaning agents, metal objects or a hard nylon or metal brush on the milk frother. Abrasive cleaners will scratch the stainless steel outer and non-stick inner surfaces.
4. **The whisks:** Remove the whisks from the jug. Wash with warm water. Dry and store in a safe place, out of young children's reach. Do not use the dishwasher.

Responsible disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

After Sales Support
Telephone (Aus): 1300 886 649
Telephone (Nz): 0800 836 761

After Sales Support

Telephone (Aus): 1300 886 649
Telephone (Nz): 0800 836 761